

LUCAS

Spares List No.

EQUIPMENT & SPARE PARTS

N. V. S. 1538

4-9-58

BRISTOL

"406"

SPARE PARTS

AMMETER	CZU60	*36242A.	FLASHER UNIT	FL5	35010A.
§ Nut, terminal		166043	FUSE BOX	SF6	033239
§ Washer, terminal nut		185022	GENERATOR	C39PV-2	22258E/F
BATTERY	GE9A		HORN, high note	WT618	69047F
COIL, IGNITION	HA12	†45054H/K (45075)	§ Cover		702575
CONTROL BOX	RB310	37187A/L	§ Support, cover		702626
DISTRIBUTOR.	DX6A	40592A.	§ Bracket		707095
Plate, clamping		410612	§ Contact set		702687
Screw, clamping		401119	Block terminal and resistance		702886
§ Cover, moulded		407043	Washer, diaphragm packing		702569
§ Nut, moulded		410600	§ Diaphragm		702851
§ Brush & Spring		404435	§ Sundry parts set		702722
§ Rotor Arm		407106	HORN, low note	WT618	69046F
§ Contact set		415359	§ Diaphragm		702836
§ Bush insulating, low tension terminal		407006	Other details as 69047F		
§ Terminal, low tension		407019	LAMPS		
§ Bush, insulating, low tension terminal		407018	BOOT	554	53343A
§ Condenser		424535	§ Cover		574803
§ Base, contact breaker		410520	§ Window		574804
§ Cam		407168	§ Rubber, seating base		574805
§ Springs, set, automatic advance*		425583	§ Screw, body fixing		126504
§ Toggle		407131	§ Bulbholder assembly		574811
§ Weight, automatic advance		*424346	§ Bulb		209
§ Shaft, and Action Plate		408404	FLASHER, FRONT & REAR	538	52272D
§ Clip, securing cover		420261	§ Lens & Rim		574267
§ Dog, driving		410601	§ Lens		574256
§ Bearing, top		189272	§ Ring, sliding		574255
§ Bushing, bearing bottom		410590	§ Rubber, lens seating		575640
§ Sundry parts set		400843	§ Body with bulbholder		574234
DISTRIBUTOR (Later) DX6A		40629A	§ Interior, bulbholder		573832
§ Contact, set		407050	§ Bulb		382
§ Springs, set, automatic advance		*54410603	§ Rubber, body seating		574231
§ Weight, automatic advance		415730			
§ Shaft & Action Plate		408475			
Other details 40592A.					

continued..

JOSEPH LUCAS LTD · BIRMINGHAM 18 · ENGLAND

LAMPS Cont'd

FLASHER REPEATER 550	52326B
Rim	526508
Lens	526502
Interior parts, bulbholder	553780
Bulb	989
Body, rubber	526503
Bulbholder, shell	554539

FRONT GRILLE ILLUMINATION

PLL	39006A
Cover	319003
Bulb 12 volt 3 watt	256
Sleeve, terminal	188818

MILNER PLATE 534

Window	573915
Cover	574825
Washer, rubber	161385
Screw, cover fixing	113061
Ring, rubber, lens seating	573916
Bulb	222
Interior, bulbholder	553780
Grommet	574049
Sleeve, terminal	555910

REVERSE 488

Rim, front	572734
Lens	572715
Sleeve, terminal	555910
Body, rubber	572728
Bulbholder, assembly	573285
Interior, bulbholder	554722
Bulb	382

STOP TAIL & REFLEX 551

Rim & lens	574615
Lens, c/w reflex	575473
Ring, sliding	574616
Rubber, lens seating	576805
Backplate, c/w bulbholder	574620
Interior, bulbholder	573828
Bulb	380
Sleeve, terminal	555910
Rubber, body seating	574607

PETROL RESERVE VALVE SPV

*78037A

RELAY, FOGLAMP L1R	33093A
--------------------	--------

RELAY, HORN SB4C-1	33116B
--------------------	--------

STARTING MOTOR M35G-1

25026E

Cover band	250322
Screw, cover fixing	127530
Nut, cover fixing screw	169160
Bolt, through fixing	228336
Cap, shaft	250592
Brushes, set	251108

continued...

STARTING MOTOR (Cont'd)

Bracket or frame commutator end	251104
Bushing, bearing	250626
Springs, set, brush tension	251942
Drive assembly	291070
Pinion & Barrel assembly	291069
Ring, barrel retaining	255815
Sleeve, drive head	291052
Plate, transmission	291057
Spring, cushioning	291056
Sleeve, & rubber	291059
Washer, friction	291055
Coupling, sleeve to screw shaft	291065
Sleeve, screwed, with control nut	291071
Washer, thrust	291038
Nut, location	291042
Pin, pilot drive to shaft	291058
Spring, anti-drift	291077
Key, woodruff	189345
Bracket or frame assembly, fixing	251189
Bushing, bearing	270883
Bracket or frame, intermediate	250550
Bushing, bearing	250528
Cup, location ring retaining	251444
Armature	250549
Field coils	251089
Terminal, field coil	251307
Sundry parts, set	256762

STEERING COLUMN CONTROL

Stop bracket	323736
Contact	323738
Bracket & contact plate	331745

SWITCHES

Bootlamp 94	31175F
Courtesy PRS5	†31302D (31284A)
Dipper FS22-1	31284A.
D. or pillar 94	31175F
Flasher TSL	031046
Interrupter(Overdrive) SS10-1	†31077E (31542)
Lighting & Ignition PRS 3	31270B
Screw, terminal	132464
Washer, spring	185000
Spring, assembly fixing	312068
Knob	316285

continued...

WINDSHIELD WIPER
MOTOR (Cont'd)

SWITCHES (Cont'd)

Overdrive, manual control	11SA	31500B
Panel	CHR1	†78312A (78331)
Reverse lamp	SS10-1	†31077E (31542)
Solenoid, starting motor	ST950	76411E
Solenoid operating	SS5	†31282A (31363)
Stop Lamp	HL2	31082E
Transmission gear solenoid (Overdrive)	TGS1	†76505B (76515)
Cover assembly, contact		765933
Cover, rubber		765063
Boct, rubber, plunger		765046
Plunger		765047
Windshield wiper	PRS9	*31847A
§ Screw, terminal		132464
§ Washer, terminal screw		185000
TERMINAL BLOCK	TB6	37101E
WINDSHIELD WIPER		
MOTOR	DR3	75310A.
Bolt, fixing	2BA	145696
§ Washer, bolt fixing	2BA-	185022
End cover with bearing, commutator end		743653
Screw, earth lead		126444
§ Brushgear		743171
§ Brush set		729367
Spring, brush		735631
§ Armature		743929

continued...

§ Coil assembly	744907
§ Fixing studs (Set of parts)	743176
Cover, gearbox	743924
Screw, cover fixing	186134
Switch, self parking	743846
Sleeve, adjusting	740557
Spring, adjusting screw	733270
Screw, adjusting	740556
Connecting rod assembly	740563
§ Shaft and gear assembly	744913
§ Sundry parts, set	740899

WHEELBOX	72686B
§ Spindle & gear	740955
Tube, rubber, spindle	740711
Nut, wheelbox fixing	153511
Bush, front	740880
Washer, rubber	740882
Bush, rear	744281
Screw, cover fixing	126444

CROSSHEAD & RACK (Cut to 39 21/32")
744256

OUTER CASING, motor to W/Box *54710550

OUTER CASING, w/Box to W/Box *54710551

OUTER CASING, short, W/Box 740746

FERRULE, outer casing. 740715

GR MMT 740811

ARM 744133

BLADE 737907

§ Rubber assembly 737917

Cap. 737916

* New Item.

† When ordering, quote part number shown in brackets.

§ Recommended spares for stock.

‡ Order separately.

Spare parts details not included in this list
may be found in Parts List CE864B (Bristol 405)